

DANCOVER[®]



PARTY TENT SEMI PRO

6m series

DANCOVER[®]



Safety Advice

Attention

In some countries approval is needed to set up a tent larger than 75 m².

The owner of the tent has the sole responsibility to make sure that these local rules are followed and that the mounting is correct.

In case of bad weather conditions, it is your responsibility to ensure that people inside are safe and that the tent does not cause damage to others.

Do not use open fire, welding equipment or other ignition sources in the tent. Though the fabric is made of flame retardant material it can still burn.

It is always recommended that you secure your tent properly with safety straps and augers when you put up the structure.

We recommend you to insure the tent, or check if it is covered by home contents insurance, in case of unplanned events, accidents or bad weather.





Tents are meant as temporary shelter and must be evacuated under extreme weather conditions.

This structure is not tested for specific snow and wind loads. That's why we always recommend to remove snow from the top.




6m -2.3 PARTY TENT SEMI PRO

Dimention		NO	6x6	6x8	6x10	6x12	6x14
Pipe 1430mm 50-50		1	16	20	24	28	32
Pipe 1915mm 38-38		2	17	24	31	38	45
Pipe 1915mm 38-38 with hole		3	4	4	4	4	4
Pipe 1470mm roof brace 6-series horizontal		4	8	10	12	14	16
Pipe 500mm roof brace 6-series horizontal		5	4	5	6	7	8
Pipe 1174mm 25-25 didagonal pipe		6	4	4	4	4	4
Pipe 2188mm 50-50 with holes		7	4	6	8	10	12
Pipe 2188mm 50-50 with holes and a hole		8	4	4	4	4	4
connector Three way 110 °54-42		9	2	2	2	2	2


6m -2.3 PARTY TENT SEMI PRO

connector Three way 110 °54-42		10	2	2	2	2	2
connector Three way 140 °54-42		11	2	2	2	2	2
connector four way 140 °54-42		12	2	3	4	5	6
connector four way 110 °54-42		13	4	6	8	10	12
Cross piece 54-42		14	4	6	8	10	12
T-piece 54-42		15	4	4	4	4	4
Connector three way –foot for the corners 54-42		16	2	2	2	2	2

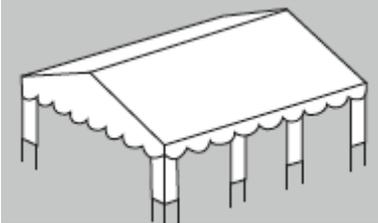
6m -2.3 PARTY TENT SEMI PRO

Connector three way –foot for the corners 54-42		17	2	2	2	2	2
Connector three way –foot for the sidewalls 54-42		18	4	6	8	10	12
Connector three way –foot for the endwalls 54-42		19	4	4	4	4	4
Groundpegs		20	4	6	8	10	10
Screw hook		21	4	4	4	4	4
Groundpeg 6x180mm		22	8	10	12	14	16
Groundpeg 4x180mm		23	36	42	48	54	60

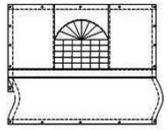

6m -2.3 PARTY TENT SEMI PRO

Screw M8X45mm		24	54	68	82	96	110
Screw M8X60mm		25	50	62	74	86	98
Locknuts		26	104	130	156	182	208
Screw 45mm		27	4	4	4	4	4
Screw 60mm		28	4	4	4	4	4
Wing nut		29	16	20	24	28	32
Allen key		30	2	2	2	2	2

6m -2.3 PARTY TENT SEMI PRO

spanner		31	2	2	2	2	2
Cap nuts		32	8	8	8	8	8
Long bungeeball		33	112	132	152	172	192
Short bungeeball		34	26	26	26	26	26
rope		35	4	4	4	4	2
roof		37	1	1	1	1	1

6m -2.3 PARTY TENT SEMI PRO

sidewall		38	6	8	10	12	14
endwall		39	2	2	2	2	2

DANCOVER®

Big or Small we cover it all...

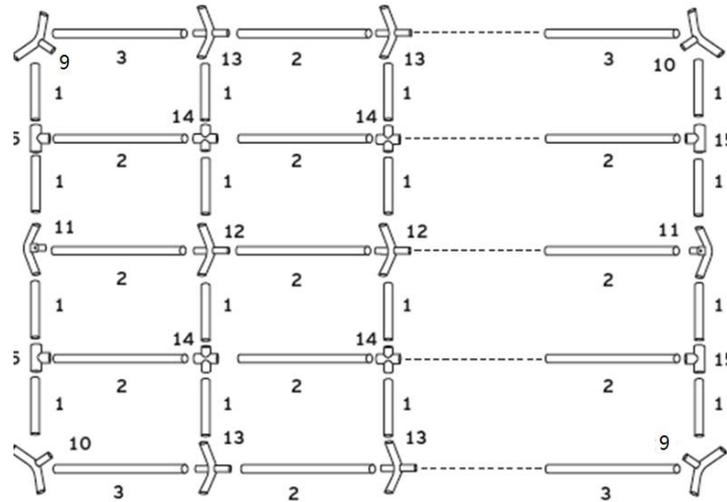
Nordre Strandvej 119 G
 3150 Hellebæk
 Denmark
 Tel.: (+45) 70 26 76 20
 Fax: (+45) 70 26 76 30

WWW.DANCOVERSHOP.COM

6m -2.3 PARTY TENT SEMI PRO

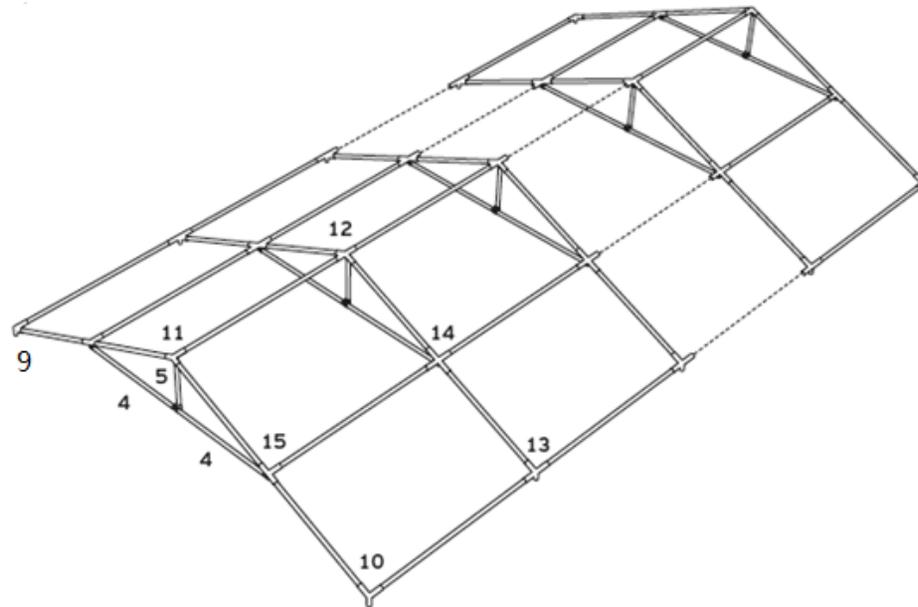
I

Select a flat surface for the tent. Unpack the boxes and check if all listed parts are included. Assemble the roof frame by mounting parts 9-15 on the pipes (Parts 1, 2, and 3) Use the screws to firmly attach the parts



II

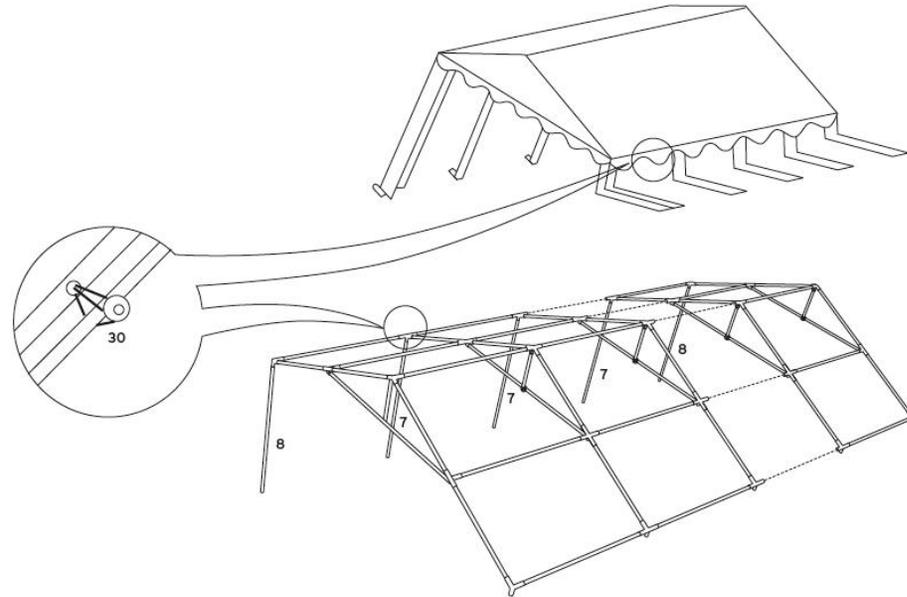
Attach the reinforcement braces (part 4 and 5) using screws (24) and wing nuts (29)



6m -2.3 PARTY TENT SEMI PRO

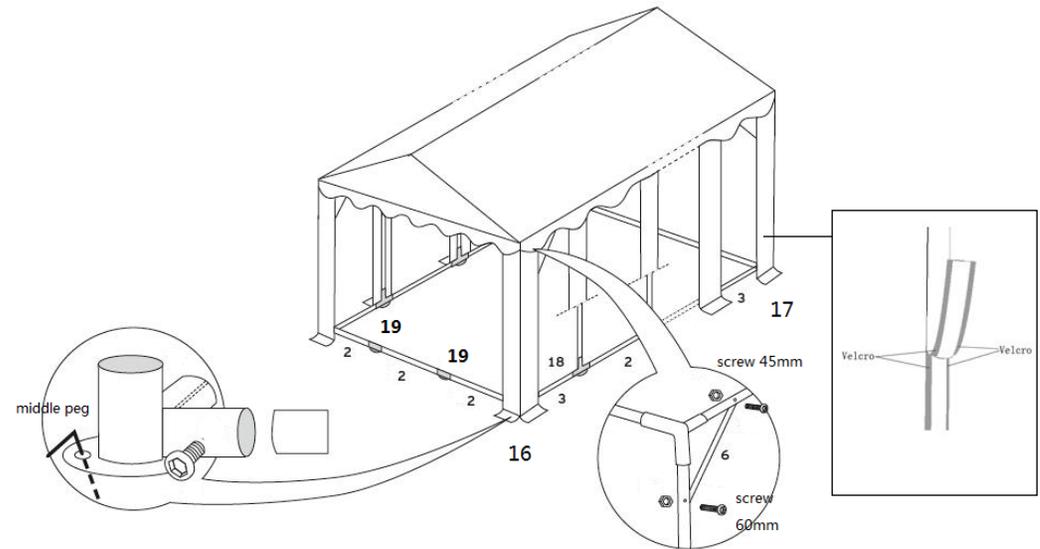
III

Lift one side of the tent frame and attach the legs(7). Attach the legs with part no. 8 to the outside in all four corners. Place the roof onto the frame and use the bungees to fasten it. Be sure not to put too much tension on the bungees in order not to make attaching the other side more difficult.



IV

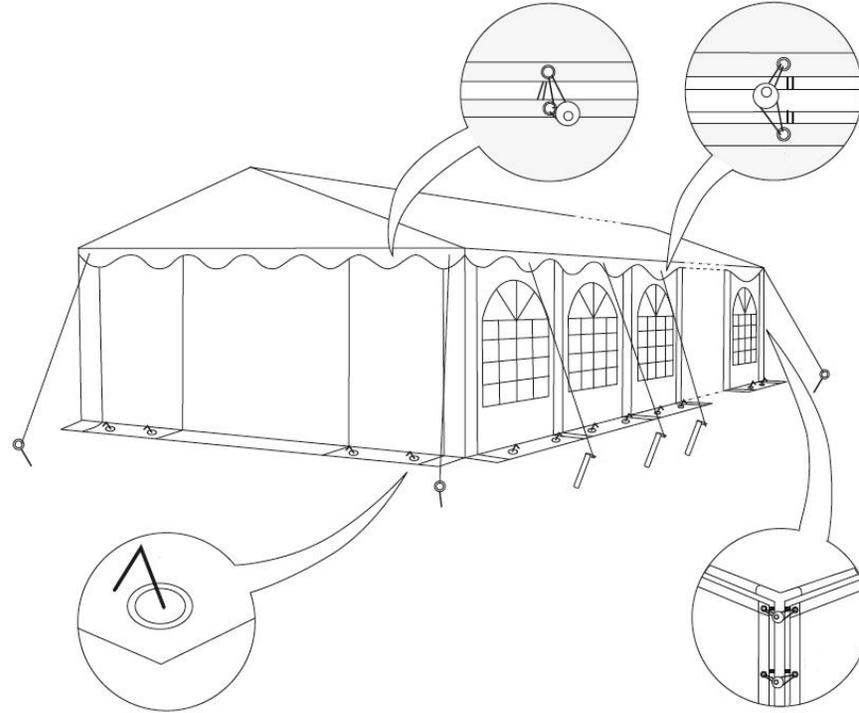
Attach the legs on the other side and install the feet(16,17,18,19) at the bottom. Use the long ground pegs to fasten the feet to the ground. Attached the side covers to the pipes(7,8) Connect leg cover with sidewall and endwall by velcro as shown. Reinforce the side frame by attaching the diagonal pipes(6) to all four corners. Complete the bottom frame with the required pipes(2,3 and 9) and connector (18).



6m -2.3 PARTY TENT SEMI PRO

V

Extend the sidewalls and the endwalls and attach the sidewalls to the frame using the bungees. Attach the endwall directly to the roof using the short bungees. Use the short ground pegs to fasten the end walls to the ground. The guy rope runs from every corner of the tent and is braced to the ground using the screw hooks. The professional ground pegs provide the tent with additional tension and stability.



Warning

1. In order to avoid being rusted by air, oil is covered on the surface of the pipes, before set up the tent, please remove the oil carefully to keep the cover clean.
 2. Take note that the tent needs to be handled carefully to avoid damage.
 3. Do not force the frame as they may be damaged in the process.
 4. Tents are meant as temporary shelter and must be evacuated under extreme weather conditions.
- Please select a suitable site for the tent to avoid the damage to underground sprinkler systems, water, gas or electrical lines.

Contact information

Head office:

Dancover A/S
Nordre Strandvej 119 G
3150 Hellebæk
Denmark

For more information
please visit:
www.dancovershop.com

National contact

Denmark:

denmark@dancover.com

UK:

uk@dancover.com

Germany:

germany@dancover.com

France:

france@dancover.com

Sweden:

sverige@dancover.com

Finland:

suomi@dancover.com

Poland:

polska@dancover.com

Luxembourg:

luxembourg@dancover.com

Spain:

espana@dancover.com

Italy:

italia@dancover.com

Switzerland:

schweiz@dancover.com

Austria:

austria@dancover.com

Norway:

norge@dancover.com

Nederland:

nederland@dancover.com

Ireland:

ireland@dancover.com

Belgium:

belgique@dancover.com